











## The BMW (Basic Mobile Workbench)

Cut list

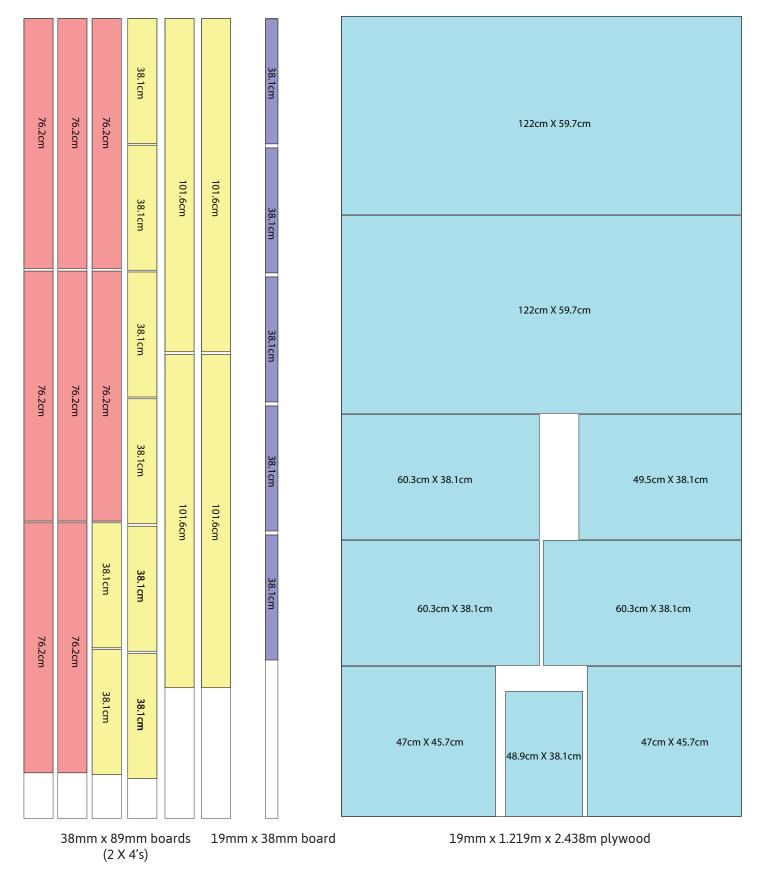





Overall dimensions

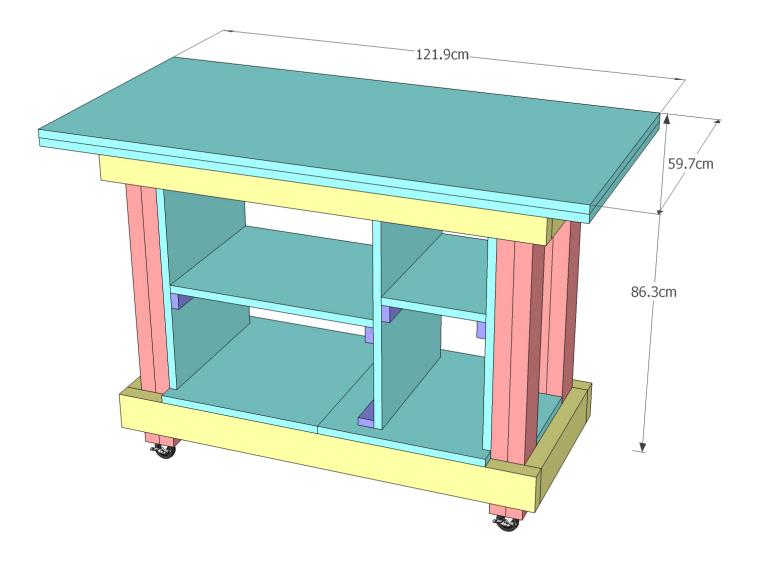





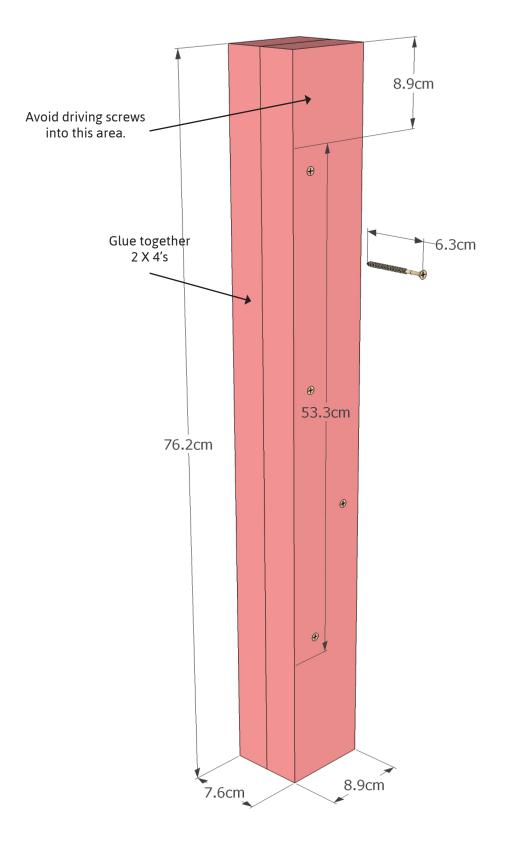




€  $\oplus$ 8.9cm 38.1cm •  $\oplus$  $\oplus$ 20.3cm € 53.3cm 76.2cm Ð Ð 6.3cm Ð Ð

Attach cross braces to make two leg assemblies.




Assemble the frame

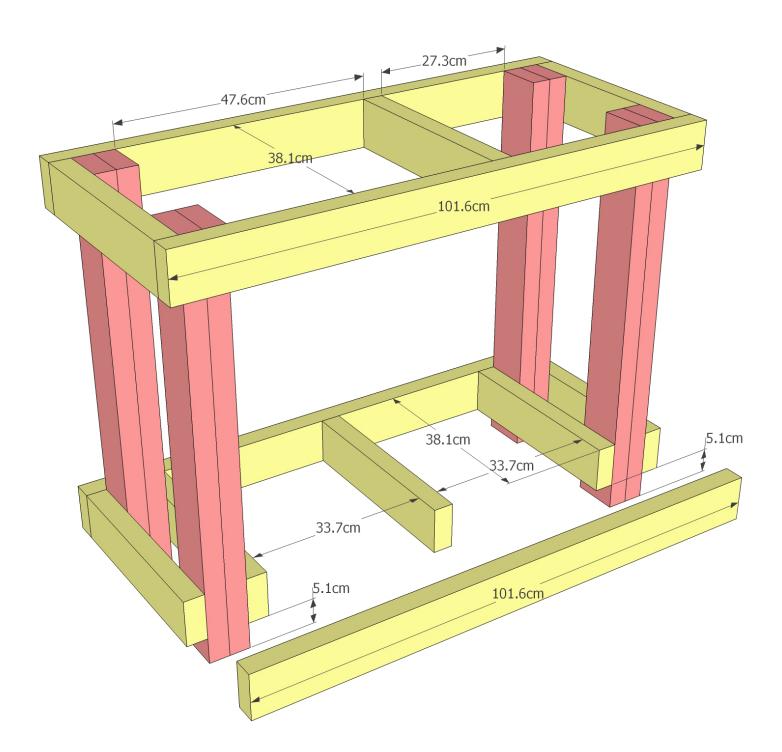




Drop in bottom shelf halves and two sides.

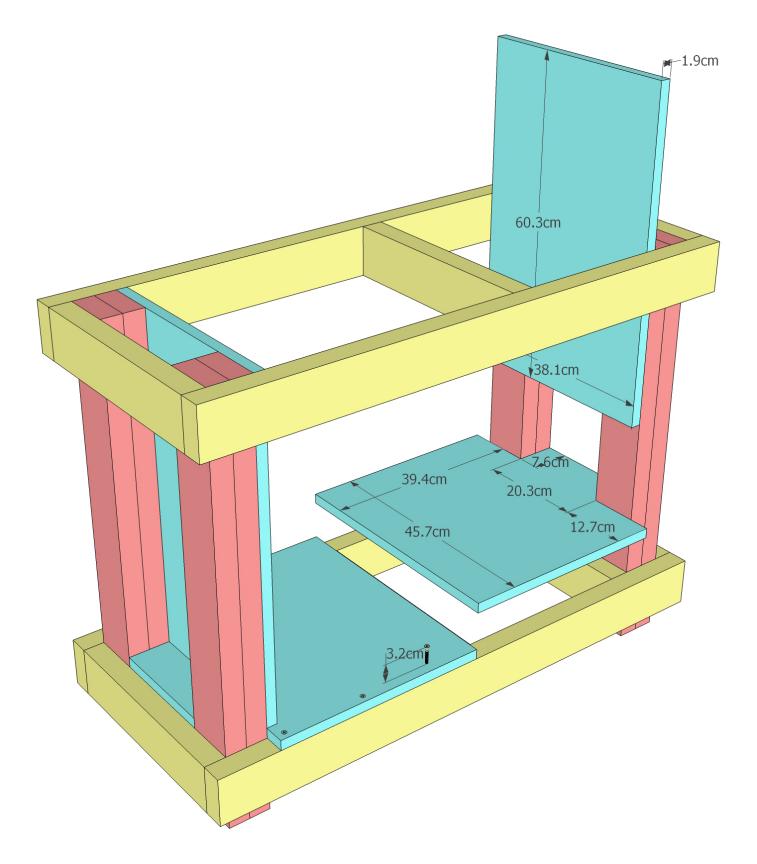



Shelf supports. Modify the positions to fit your needs.

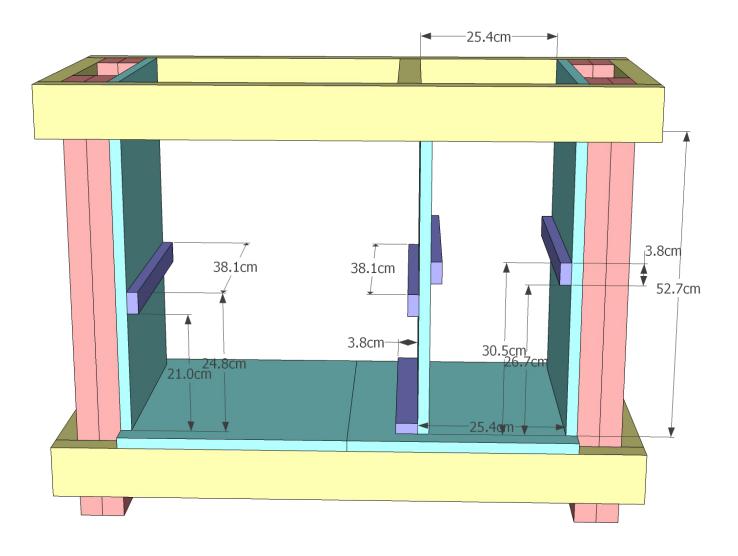



## Attach shelves. Laminate 2 plywood pieces for top and screw in place. Attach casters.

